


# IGNITION COIL

## COMPONENTS


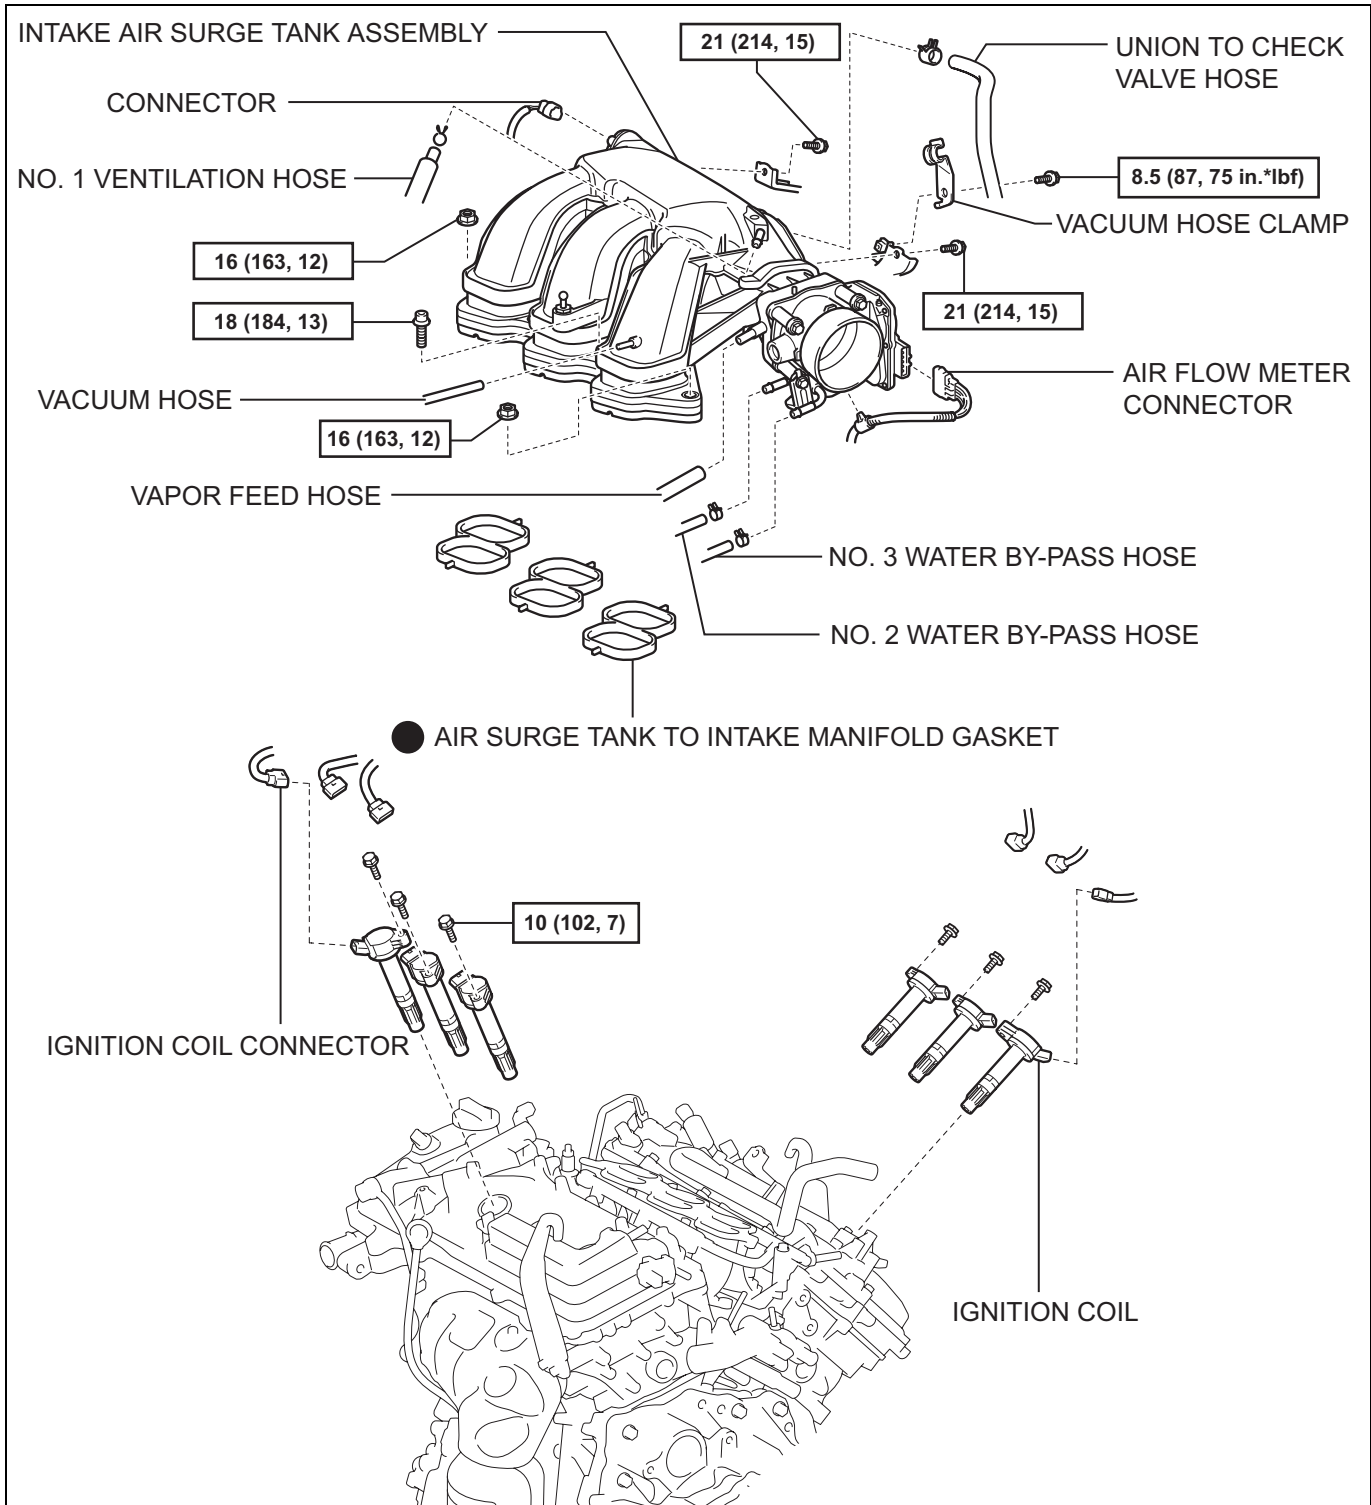


N\*m (kgf\*cm, ft.\*lbf) : Specified torque

● Non-reusable part

## REMOVAL

1. **REMOVE ENGINE ASSEMBLY**  
(a) Remove the engine (see page [EM-21](#)).
2. **REMOVE INTAKE AIR SURGE TANK ASSEMBLY**  
(See page [EM-27](#))
3. **REMOVE IGNITION COIL**  
(a) Disconnect the 6 ignition coil connectors.  
(b) Remove the 6 bolts and 6 ignition coils.

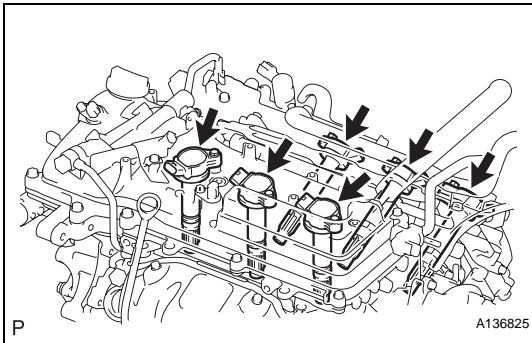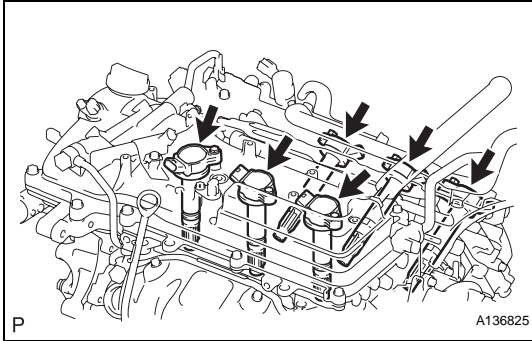

## INSTALLATION

1. **INSTALL IGNITION COIL**  
(a) Install the 6 ignition coils with the 6 bolts.  
**Torque: 10 N\*m (102 kgf\*cm, 7 ft.\*lbf)**  
(b) Connect the 6 ignition coil connectors.
2. **INSTALL INTAKE AIR SURGE TANK ASSEMBLY** (See page [EM-34](#))
3. **INSTALL ENGINE ASSEMBLY**  
(a) Install the engine (see page [EM-31](#)).